


# Operation Guide 5577


CASIO®

- Your watch may differ somewhat from the one shown in the illustration.
- The actual positions of the crown and button depend on your watch model, and may be different from those shown in the nearby illustration.

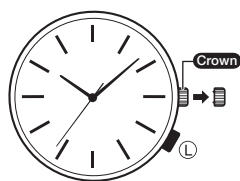


## Crown Operations

Some water-resistant models (100 meters, 200 meters) have a screw-in crown. When you need to perform a crown operation, rotate it counterclockwise to unscrew it. Then pull the crown out. Avoid applying undue force when pulling. The watch loses its water resistance while the crown is unscrewed. After performing a crown operation, fully screw the crown back in.

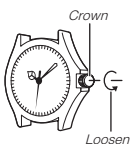

## If your watch has a rotary bezel...

You can rotate the bezel to align its ▼ mark with the minute hand. Then you will be able to tell how much time has elapsed since aligning the ▼ mark.

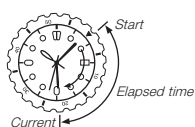

## To adjust the time setting

When the second hand is at 12 o'clock, pull out the **Crown** to stop it.

Rotate the **Crown** to change the time setting.

Push the **Crown** back in on a time signal to resume timekeeping.

### Note

- When changing the time, move the minute hand four or five minutes past your final setting, and then back it up to the setting you want.

## To turn on illumination

Hold down **L**.

### Note

- Illumination remains turned on as long as **L** is depressed.
- Illumination will turn off about four seconds after **L** is released.

## Illumination Precautions

- Illumination may be hard to see when viewed under direct sunlight.
- Frequent use of illumination runs down the battery.

## Specifications

**Accuracy at normal temperature:** ±20 seconds a month

**Illumination:** LED (light-emitting diode)

**Battery:** One silver oxide battery (Type: SR626SW) and one lithium battery (Type: CR1616)

**Battery Life:** Approximately 3 years on type SR626SW and type CR1616 (assuming one 9-second illumination operation per day)

- Always have both batteries replaced at the same time.

Specifications are subject to change without notice.